
Installation Guide


1) Screw bolt installation

Please use provided screws(Four) to install the fan.

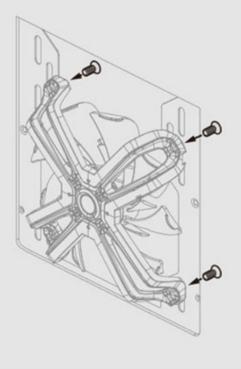

2) Push-Pin installation

Please use provided push-pin to install the fan if your case's HDD rack(Bottom) is causing interference of installation by screw.

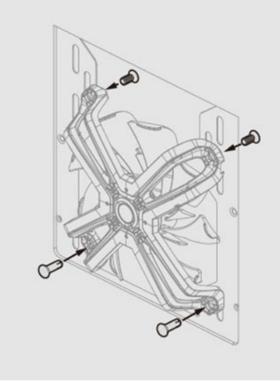


※ Precautions for push-pin fastening

Press the push-pin until it is fully engaged.




Notice for push-pin direction

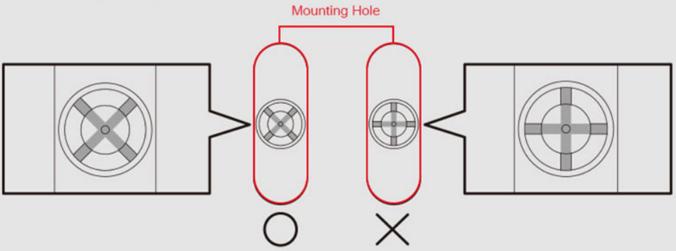


If the case fan mounting hole for the push-pin is a streamlined hole, install diagonally as shown in the picture.

ARGB 3-PIN CONNECTOR

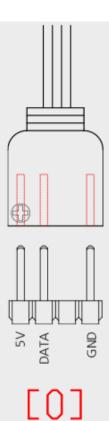

Please make sure of the Pin qty and the direction of the Addressable RGB connector before installation.

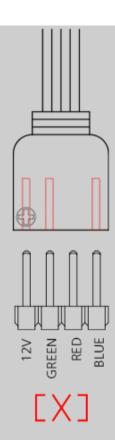

Caution:

If Addressable 3 Pin connects to 12V header instead of 5V header improperly, It may cause fatal damages to the product by the overvoltage.

Components

SF120 Fan x 1 Gigabyte M/B Convertor x 1 Low Noise Connector x 1 Push-Pins(PC Case) x 4 Screw Bolts x 4 Manual & Warrnaty x 1



Specifications

Model	Bearing Type	Dimensions
ZM-SF120	FDB Bearing	120 x 120 x 26(H) mm
Weight	Rating Voltage	Rating Current
100g	Fan: 12 V DC LED: 5 V DC	Fan: 200mA LED: 300mA
Fan Speed	Max Airflow	Max Noise Level
800~1,500 RPM ±10%	54 CFM	28.0 dB(A) ±10%
Life Span	Connector	Cable Length
100,000hrs	4-Pin(PWM), 3-Pin(Addressable)	Fan: 700mm LED: 700mm

Components

Gigabyte M/B Convertor x 1, Low Noise Connector x 1, Push-Pins x 4(for PC Case), Screw Bolts x 4

* The length & dimension can be differ depend on measuring method.









www.zalman.com



